



ELECTRIC VEHICLE CHARGER EVC01
Series

HIZLI KURULUM KILAVUZU
QUICK START GUIDE




For user manual, installation guideline and other documents see manuals tab,
<https://www.vestel-evchargers.com/eu/downloads/manuals?open=evc01>

Hereby, Vestel declares that the radio equipment type Electric Vehicle Charger is in compliance with Directive 2014/53/EU & The Radio Equipment Regulations 2017. The full text of the declaration of conformity is available at the above internet address in 'other documents' part.



VESTEL
MOBILITY



GÜVENLİK BİLGİLERİ



DİKKAT

ELEKTRİK ÇARPMASI RİSKİ



DİKKAT: ELEKTRİKLİ ARAÇ ŞARJ CİHAZI, ELEKTRİKLE İLGİLİ BÖLGESEL VEYA ULUSAL DÜZENLEMELERE UYGUN OLARAK LİSANSLI VEYA DENEYİMLİ BİR ELEKTRİKÇİ TARAFINDAN MONTE EDİLMELİDİR.



DİKKAT



Elektrikli araç şarj cihazının AC şebeke bağlantısı ve yük planlaması, yürürlükteki bölgesel veya ulusal elektrik yönetmelikleri ve standartlarında belirtildiği şekilde yetkililer tarafından incelenmeli ve onaylanmalıdır. Birden fazla elektrikli araç şarj cihazı kurulumunda, yük planı buna göre belirlenecektir. AC şebeke besleme bağlantısı veya yük planlaması hatalarından kaynaklı hasar ve risk oluşması durumunda, üretici doğrudan veya dolaylı olarak herhangi bir sebepten sorumlu tutulamaz.

ÖNEMLİ - Kurulum veya çalıştırma öncesinde bu talimatları tamamiyle okuyun

GÜVENLİK UYARILARI

- Güvenlik ve kullanımla ilgili bu kılavuzu daha sonra başvurmak üzere güvenli bir yerde saklanmalıdır.
- Şarj istasyonunu kullanmadan önce doğru besleme voltajından emin olmak için etiketteki voltajı kontrol edin.
- Normal çalışmasından şüphe ediliyorsa veya ünite hasarlıysa, kullanmaya devam ETMEYİN; ana güç anahtarlarını (MCB ve RCCB) kapatın. Kurulumu yapan kişiyle iletişime geçin.
- Oda sıcaklığı aralığı doğrudan güneş ışığı almayan bir ortamda yaklaşık -25°C ile +50°C arasında ve bağıl nem oranı %5 ile %95 arasında olmalıdır. Şarj istasyonunu yalnızca çalışma koşullarında kullanın.
- Cihazın konumu şarj istasyonunun aşırı ısınmasını önleyecek şekilde seçilmelidir. Doğrudan güneş ışığı veya ısı kaynakları nedeniyle oluşan yüksek çalışma sıcaklıkları, şarj akımını azaltabilir veya şarj sürecini geçici olarak kesintiye uğratabilir.
- Şarj istasyonu hem dış hem de iç mekanda kullanıma uygundur. Kamusal alanlarda kullanılamaz.
- Yangın, elektrik çarpması veya ürünün zarar görme riskini en aza indirmek için bu cihazı aşırı yağmur, kar, fırtına veya diğer olumsuz hava koşullarına maruz bırakmayın. Ayrıca, şarj istasyonunun sıvı sıçramalarına veya püskürmelerine maruz bırakılmaması gerekir.
- Şarj istasyonunun klemenslerine, elektrikli araç konektörüne ve diğer tehlikeli elektrikli parçalara keskin metal nesnelerle dokunmayın.
- Isı kaynaklarına maruz kalmaktan kaçının ve ürünü yanıcı, patlayıcı, karmaşık veya yanıcı maddelerden, kimyasallardan veya buharlardan uzak bir yere yerleştirin.

- Patlama riski. Cihazda, yanıcı buharlara maruz kalmaması gereken iç yanıcı veya kıvılcım hassasiyeti olan bileşenler mevcuttur. Ünite, girintili boşluklara veya zemin seviyesinin altına yerleştirilmemelidir.
- Cihaz, yükleme sırasında havalandırma gerektirmeyen araçların şarj edilmesi için tasarlanmıştır.
- Patlama ve elektrik çarpması riskini önlemek için belirtilen devre kesici ve toprak kaçağı koruma cihazının bina şebekesine bağlandığından emin olun.
- Prizin en alt kısmı, zeminden 0,9 m ile 1,5 m arasında bir yükseklikte olmalıdır.
- Adaptör kullanımına izin verilmemektedir. Uzatma kablolarının kullanımına izin verilmemektedir.

"ÜRETİCİ, ÜRÜNÜN KESİNTİSİZ VEYA SORUNSUZ ÇALIŞACAĞINA DAİR GARANTİDE BULUNMAZ."



UYARI: Fiziksel, algısal veya zihinsel olarak yetersiz veya deneyimsiz kişiler (çocuklar dahil) güvenliklerinden sorumlu olan bir kişinin gözetimi olmadan elektrikli bu cihazı kullanmamalıdır.



DİKKAT: Bu araç şarj ünitesi, yalnızca şarj sırasında havalandırma gerektirmeyen elektrikli araçları şarj etmek için tasarlanmıştır.

İŞARETLER VE TALİMATLAR

ELEKTRİKLİ ARAÇ ŞARJ İSTASYONU KURULUM KILAVUZU

Kurulumla birlikte, fiziksel veya dijital olarak, elektrikli araç besleme ekipmanı sağlanmalıdır.

ELEKTRİKLİ ARAÇ BESLEME EKİPMANI KULLANIM KILAVUZU

Üretici tarafından, elektrikli araç besleme ekipmanı üzerinde veya kullanım kılavuzu içerisinde kullanıcı bilgileri sağlanmalıdır.

Bu bilgilerde aşağıdaki hususlar belirtilmelidir:

- Kullanımına izin verilen adaptörler veya dönüştürücü adaptörler.
- Kullanımına izin verilmeyen adaptörler veya dönüştürücü adaptörler.
- Adaptör veya dönüştürücü adaptör kullanımına izin verilmediğine dair bilgilendirme.
- Uzatma kablosu kullanımına izin verilmediğine dair bilgilendirme.

Kullanım kılavuzu ulusal kullanım kısıtlamaları ile ilgili bilgileri de içermelidir.

TOPRAK BAĞLANTISI UYARISI


- Bu ürün toprak bağlantılı, metal, sabit bir kablo tesisat sistemine bağlanmalıdır ya da devre iletkenleriyle birlikte bir ekipman topraklama hattı döşenmeli ve bu hat ekipman toprak klemensine veya üründeki ilgili bağlantıya bağlanmalıdır.
- Şarj istasyonu merkezi bir topraklama sistemine bağlanmalıdır. Şarj istasyonuna bağlanan topraklama iletkeni, şarj cihazının içindeki ekipman topraklama pabucuna bağlanmalıdır. Bu, devre iletkenleriyle çalıştırılmalı ve ekipman topraklama çubuğuna ya da şarj istasyonundaki kabloya bağlanmalıdır. Şarj istasyonuna yapılan bağlantılar, kurulum ve satın alma işlemini gerçekleştiren kişilerin sorumluluğundadır.
- Elektrik çarpma riskini azaltmak için cihazı yalnızca düzgün şekilde topraklanmış prizlere bağlayın.
- **UYARI:** Kurulum ve kullanım sırasında şarj istasyonunun kesintisiz ve doğru şekilde topraklandığından emin olun.

GÜÇ KABLOLARI, FİŞLER VE ŞARJ KABLOSU UYARILARI

- Şarj kablosunun şarj istasyonu yanındaki Tip 2 prizle uyumlu olduğundan emin olun.
- Hasarlı bir şarj kablosu yangına veya elektrik çarpmasına neden olabilir. Aşınmış, kopmuş veya farklı bir şekilde hasar görmüş esnek Şarj kablosunu veya araç kablosunu kullanmayın.
- Şarj kablosunun kimsenin basmayacağı, takılmayacağı veya kablounun hasar görmeyeceği ya da strese maruz kalmayacağı şekilde düzgünce yerleştirildiğinden emin olun.
- Şarj kablosunu kuvvetli bir şekilde çekmeyin veya kabloya keskin nesnelerle zarar vermeyin.
- Kısa devreye veya elektrik çarpmasına neden olabileceği için elektrik kablosuna/fişine veya araç kablosuna asla ıslak elle dokunmayın.
- Yangın veya çarpılma riskinden kaçınmak için bu cihazı uzatma kablosuyla kullanmayın. Şebeke kablosu veya araç kablosunun hasar görmesi durumunda, tehlikeyi önlemek için, kablo; üretici, servis temsilcisi veya benzer nitelikteki kişiler tarafından değiştirilmelidir.

TEKNİK ÖZELLİKLER


Model	EVC01-AC22 Serisi	EVC01-AC11 Serisi	EVC01-AC7 Serisi
AC Maksimum Şarj Çıkışı	22kW	11kW	7,4kW
AC Şebekede Gerekli Devre Kesici	4P-40A MCB Tip-C	4P-20A MCB Tip-C	2P-40A MCB Tip-C
AC Şebekede Gerekli Kaçak Akım Rölesi	4P-40A - 30mA RCCB Tip-A	4P -20A - 30mA RCCB Tip-A	2P -40A - 30mA RCCB Tip-A
Gerekli AC Şebeke Kablosu	5x 6 mm ² (< 50 m) Dış Ölçüler: Ø 15-21 mm	5x4 mm ² (< 50 m) Dış Ölçüler: Ø 15-21 mm	3x 6 mm ² (< 50 m) Dış Ölçüler: Ø 11-15 mm

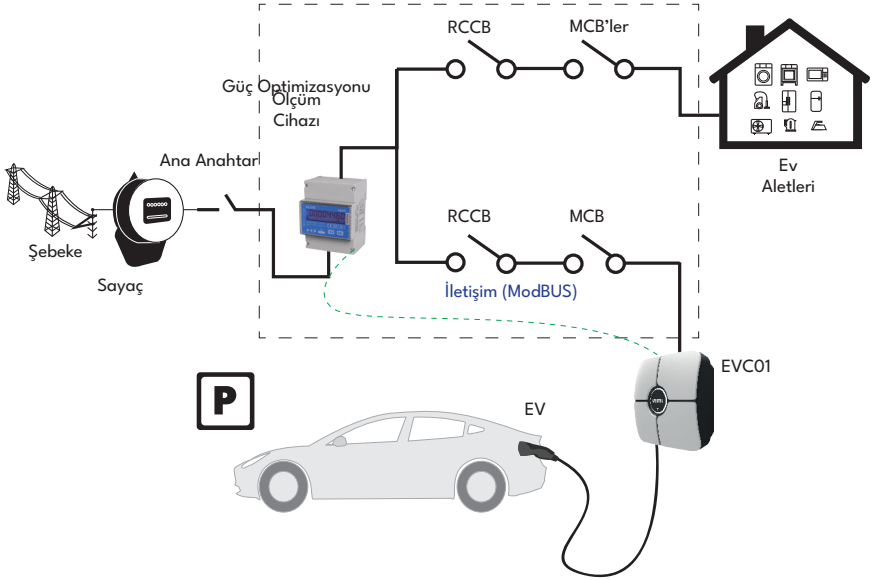

GEREKLİ EKİPMAN, ALET VE AKSESUARLAR


		
Matkap Ucu 8mm	Darbeli Matkap	PC
		
Volt Göstergesi	Torx T20 Güvenli Tornavida	Su Terazisi
		
Düz Uçlu Tornavida (Uç genişliği 2,00-2,5 mm)	Sivri Uçlu Açma Aleti	Dik Açılı Tornavida Adaptörü / Torx T20 Güvenli Uç
		
RJ45 Sıkıştırma Aleti	Cat5e veya cat6 ethernet kablosu	

KUTU İÇERİĞİ

					
Dübel (M8x50) Plastik Dübel	Vida (M6x50)	Kanca Montaj Plakası	Torx T20 Güvenli L Anahtar	SİM Kart (Opsiyonel)	QSG(Hızlı Başlangıç Kılavuzu)
					
Montaj Plakası	Vida (M4x8)	Torx (M4x9)	Metal Kanca	Ferrit	Ana&Kullanıcı RFID Kartı

ŞARJ İSTASYONU KAPAĞINI AÇMA






	DİKKAT ELEKTRİK ÇARPMASI RİSKİ	
Lütfen şarj istasyonu şebeke beslemesini kapatın 		

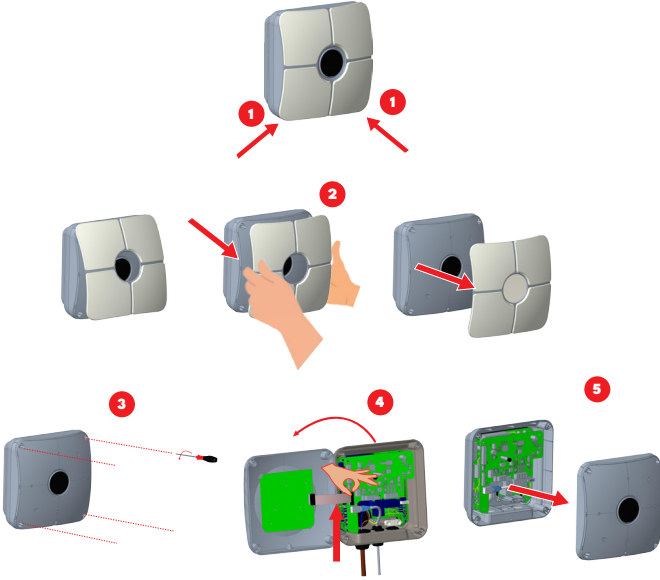

- 1- Kozmetik kapağın tırnaklarını ön kapak köşelerinden çıkarın. İlk olarak, sol alt köşeyi tutun ve kendinize doğru çekin, sol alt tırnak çıkacaktır. Ardından alt kısmı tutun. Ön kapağın sağ köşesini kendinize doğru çekin, sağ alt tırnak çıkacaktır.
- 2- Kozmetik kapağı, köşelerinden tutup kendinize doğru çekerek, yukarıdaki görselde gösterildiği gibi çıkarın.
- 3- Daha sonra ana gövdeye bağlı ön kapağın vidalarını sökün.
- 4- Ünitenin arka ve ön tarafındaki kartlar arasında bulunan düz kabloyu çıkarın.
- 5- Ön kapağı çıkarın.

DUVAR MONTAJI


Duvara montaj işlemi, tüm şarj istasyonu modellerine uygulanabilir. Metal ayak montajı ilgili kılavuzda ayrıca açıklanmıştır.

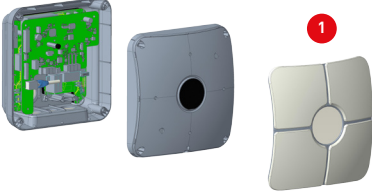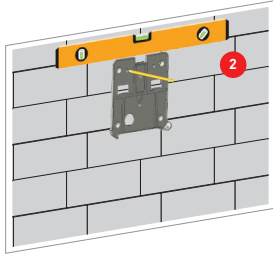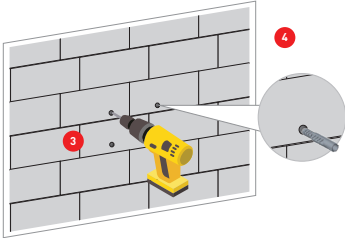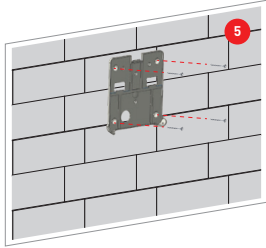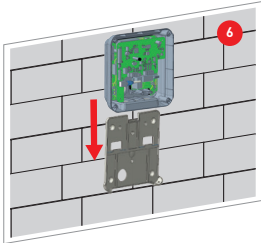1- Talimatı izleyerek ürünün ön kapağını açın.	2- Aksesuar çantasında bulunan şarj istasyonunun montaj plakasını duvara yerleştirin ve matkap ucu deliklerini kalemle işaretleyin.
	
3- Darbeli matkap (8mm matkap ucu) kullanarak işaretli noktalardan duvarı delin.	5- Montaj plakasını aşağıdaki şekilde gösterildiği gibi aksesuar çantasındaki (M6x50) vidalarla duvara sabitleyin.
	
6- Cihazın arka tarafını aşağıdaki şekilde montaj plakasına yerleştirin.	7- Ürünün aksesuar çantasında bulunan ve aşağıdaki şekilde gösterilen Torx (M4x9) güvenlik vidalarını sıkın.
	

8-AC şebeke kablosunu şarj istasyonunun sol kısmında bulunan kablo rakorundan istasyona sokun. Şarj cihazının modeline bağlı olarak, sonraki sayfalarda bulunan AC Şebeke Bağlantısı talimatlarını izleyin. (Tek/Üç Faz)



9-Kablo rakorlarını şekilde gösterildiği gibi sıkın. Şayet müteakip bölümlerle ilgili herhangi bir işlem kullanılıyorsa, şarj istasyonunun kapağını kapatmadan önce bu bölümlerdeki talimatları izleyin.


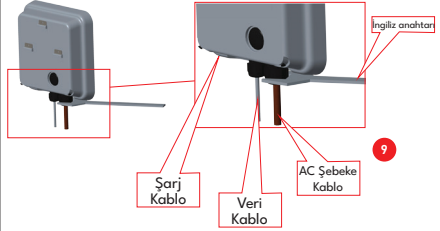


10-Şarj istasyonunun ön kapağını kapatmak için daha önce sökülmüş olan kapak vidalarını takın.


(Min:0,9 Nm ; Max:1,1 Nm tork değeri).

Ön kapağı kapatmadan önce düz kabloyu çıkarılan karta bağlamayı unutmayın.


11- Kozmetik kapağı şarj istasyonuna takmak için tırnaklarını kullanarak ön kapağa monte edin. Ön kapak ve kozmetik kapak vidalarını aksesuar çantasında bulunan ve aşağıdaki şekilde gösterilen M4x8 vidalarıyla sıkın.

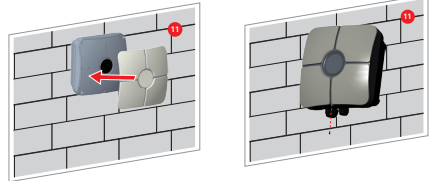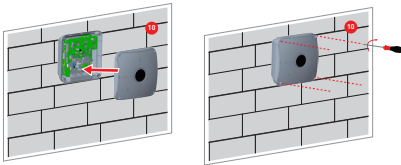


12-Şarj kablosunu bükmek için, aksesuar çantasında verilen kablo kancası montaj braketini duvara yerleştirin ve matkap deliklerini kalemle işaretleyin.

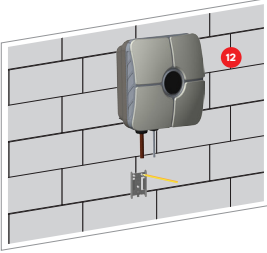


13-Darbeli matkap (8mm matkap ucu) kullanarak işaretli noktalardan duvarı delin.

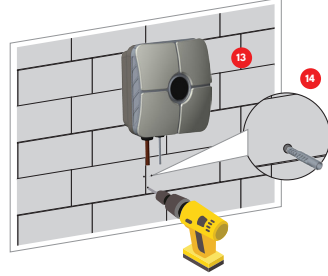


15-Ürünün güvenlik vidalarını (M6x50) uygun tornavida kullanarak sıkın.

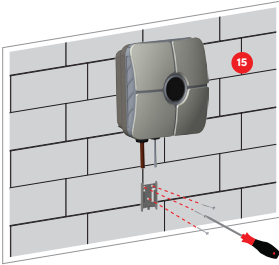


16-Metal kablo kancasını aksesuar çantasında bulunan montaj braketinin üzerine aşağıdaki şekilde yerleştirin

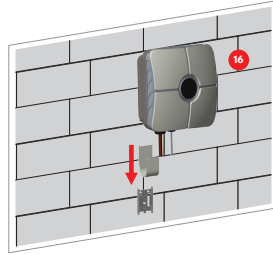


17-Şarj kablosunu kablo kancasının etrafına sarın.

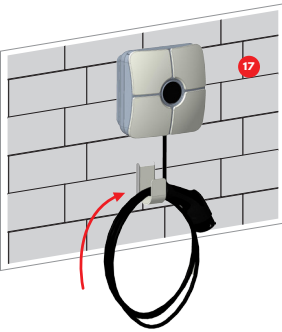

18-Ünite kullanıma hazır durumdadır.

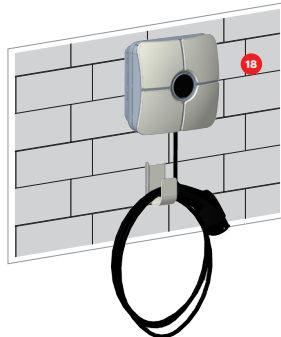


TEK FAZ ŞARJ İSTASYONU AC ŞEBEKE BAĞLANTISI

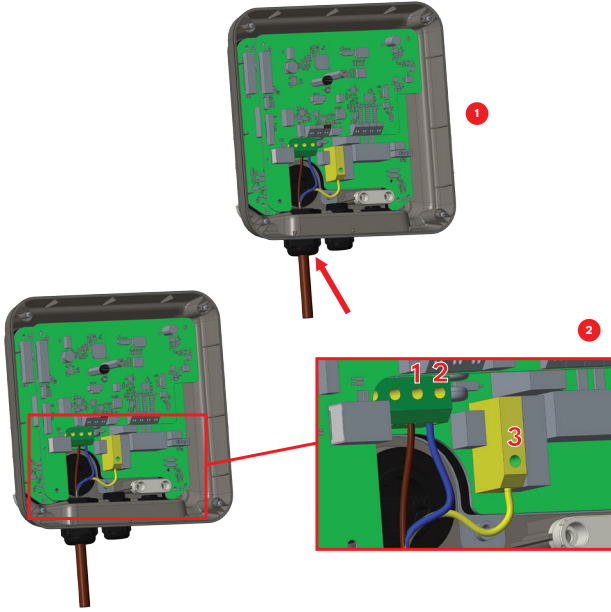

Kabloları şekilde gösterildiği gibi klemens blokuna yerleştirin. AC Kablo Rengi ile Elektrik Klemensi numarasını eşleştirmek için aşağıda yer alan tabloyu kontrol edin.

Elektrik Klemensi	AC Kablosunun Rengi
1	AC L1 (Kahverengi)
2	AC Nötr (Mavi)
3	Toprak (Yeşil-Sarı)


TEK FAZLI ŞARJ İSTASYONU AC ŞEBEKE BAĞLANTI (isteğe bağlı PEN ile)

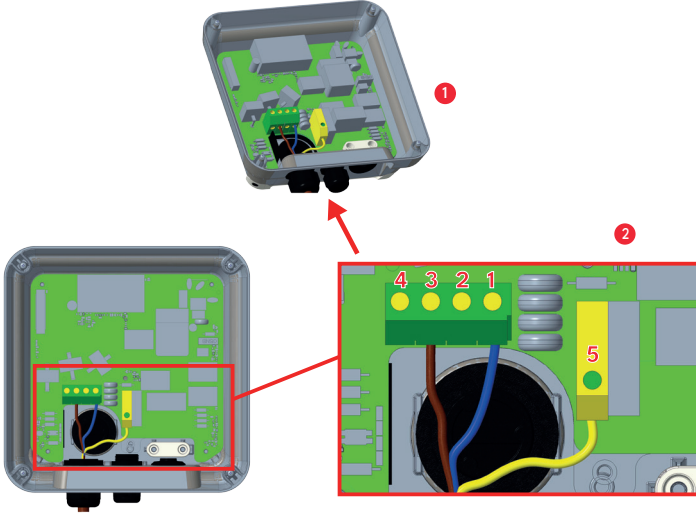

Insert the cable to the terminal block as shown in the image. AC Kablo Rengi ile Elektrik Klemensi numarasını eşleştirmek için aşağıda yer alan tabloyu kontrol edin.

Elektrik Klemensi	AC Kablosunun Rengi
1	AC Nötr (Mavi)
3	AC L1 (Kahverengi)
5	Toprak (Yeşil-Sarı)

ÜÇ FAZ ŞARJ İSTASYONU AC ŞEBEKE BAĞLANTISI

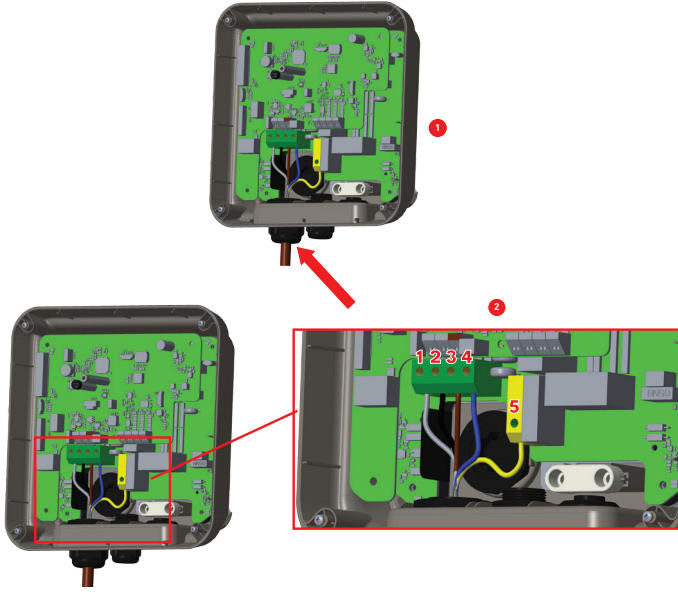

Kabloları şekilde gösterildiği gibi klemens blokuna yerleştirin. AC Kablo Rengi ile Elektrik Klemensi numarasını eşleştirmek için aşağıda yer alan tabloyu kontrol edin.

Elektrik Klemensi	AC Kablosunun Rengi
1	AC L1 (Gri)
2	AC L2 (Siyah)
3	AC L3 (Kahverengi)
4	AC Nötr (Mavi)
5	Toprak (Yeşil-Sarı)

DUVARA MONTAJ UYARILARI

- Şarj istasyonunuzu duvara monte etmeden önce bu açıklamaları okuyun.
- Şarj istasyonunu tavana veya eğimli bir duvara monte etmeyin.
- Belirtilen duvara montaj vidalarını ve diğer aksesuarları kullanın.
- Bu cihaz bina içi ve bina dışı montaja uygun yapıdadır. Ünite, bina dışına monte edilecekse iletkenlerin üniteye bağlanması için kullanılacak donanım bina dışı kullanıma uygun olmalı ve montaj işlemi ünitenin IP derecesi korunacak şekilde yapılmalıdır.

DEVREYE ALMA



Ürününüzde Wi-Fi Hotspot özelliği mevcuttur.

Wi-Fi Hotspot

Wi-Fi Hotspot SSID ve parolası aşağıda gösterildiği gibi Hızlı Başlangıç Kılavuzunun ön kapağının iç yüzüne yapıştırılmış etikette mevcuttur.

WEB Konfigürasyonu UI

Web tarayıcınızı açın ve Hızlı Başlangıç Kılavuzunun ön kapağındaki etikette yazılı IP adresini girin. Etiketте yazılı ağ bilgilerini girerek Wi-Fi Hotspot üzerinden web yapılandırma arayüzünde oturum açabilirsiniz.

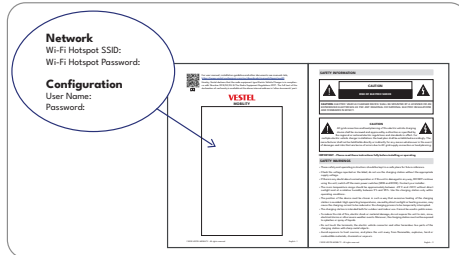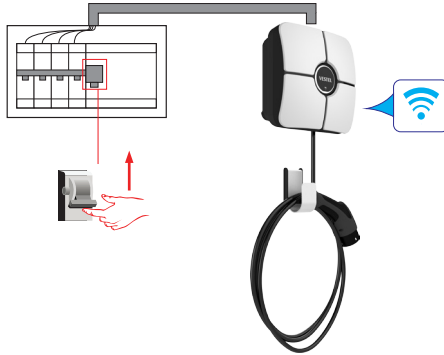

SAFETY INFORMATION



CAUTION

RISK OF ELECTRIC SHOCK



CAUTION: ELECTRIC VEHICLE CHARGER DEVICE SHALL BE MOUNTED BY A LICENSED OR AN EXPERIENCED ELECTRICIAN AS PER ANY REGIONAL OR NATIONAL ELECTRIC REGULATIONS AND STANDARDS IN EFFECT.



CAUTION



AC grid connection and load planning of the electric vehicle charging device shall be reviewed and approved by authorities as specified by the regional or national electric regulations and standards in effect. For multiple electric vehicle charger installations the load plan shall be established accordingly. The manufacturer shall not be held liable directly or indirectly for any reason whatsoever in the event of damages and risks that are borne of errors due to AC grid supply connection or load planning.

IMPORTANT - Please read these instructions fully before installing or operating

SAFETY WARNINGS

- These safety and operating instructions should be kept in a safe place for future reference.
- Check the voltage reported on the label; do not use the charging station without the appropriate supply voltage.
- If there is any doubt about normal operation or if the unit is damaged in any way, DO NOT continue using the unit; switch off the main power switches (MCB and RCCB). Contact your installer.
- The room temperature range should be approximately between -25°C and +50°C without direct sunlight and at a relative humidity between 5% and 95%. Use the charging station only within operating conditions.
- The position of the device must be chosen in such a way that excessive heating of the charging station is avoided. High operating temperatures, caused by direct sunlight or heating sources, may cause the charging current to be reduced or the charging process to be temporarily interrupted.
- The charging station is intended both for outdoor and indoor use. Cannot be used in public areas.
- To reduce the risk of fire, electric shock or material damage, do not expose the unit to rain, snow, electrical storms or other severe weather events. Moreover, the charging station must not be exposed to splashes or spray of liquids.
- Do not touch the terminals, the electric vehicle connector and other hazardous live parts of the charging station with sharp metal objects.
- Avoid exposure to heat sources, and place the unit away from flammable, explosive, hard or combustible materials, chemicals or vapours.

- Risk of explosion. The equipment has internal flammable or spark-sensitive components that should not be exposed to flammable vapours. The unit should not be located in recessed spaces or below floor level.
- The device is designed solely for charging vehicles that do not require ventilation during loading.
- To avoid the risk of explosion and electric shock, make sure that the specified circuit breaker and earth leakage circuit breaker are connected to the network of the building.
- The lowest part of the socket should be between 0.9 m and 1.5 m above the ground.
- The use of adapters is not allowed. The use of extension cables is not allowed.

“MANUFACTURER DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCT WILL BE UNINTERRUPTED OR ERROR-FREE.”



WARNING: Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and or knowledge use electrical devices unsupervised.



CAUTION: This vehicle charger unit is intended only for charging electric vehicles not requiring ventilation during charging.

MARKING AND INSTRUCTIONS

INSTALLATION MANUAL OF EV CHARGING STATIONS

The installation shall be provided with the EV supply equipment, in a physical or digital form.

USER MANUAL FOR EV SUPPLY EQUIPMENT

User information shall be provided by the manufacturer on the EV supply equipment or in a user's manual.

Such information shall state:

- Which adaptors or conversion adapters are allowed to be used.
- Which adaptors or conversion adapters are not allowed to be used.
- That adaptors or conversion adapters are not allowed to be used.
- That cord extension sets are not allowed to be used.

The user manual shall include information about national usage restrictions.

GROUND CONNECTION WARNINGS


- This product must be connected to a grounded, metal, permanent wiring system. or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.
- Charging station must be connected to a centrally grounded system. The ground conductor entering the charging station must be connected to the equipment grounding lug inside the charger. This should be run with circuit conductors and connected to the equipment grounding bar or lead on the charging station. Connections to the charging station are the responsibility of the installer and purchaser.
- To reduce the risk of electrical shock, connect only to properly grounded outlets.
- **WARNING :** Make sure that during installing and using, the charging station is constantly and properly grounded.

POWER CABLES, PLUGS and CHARGING CABLE WARNINGS

- Be sure that charging cable is Type 2 socket compatible on charging station side.
- A damaged charging cable can cause fire or give you an electric shock. Do not use this product if the flexible Charging cable or vehicle cable is frayed, has broken insulation, or shows any other signs of damage.
- Ensure that the charging cable is well positioned thus; it will not be stepped on, tripped over, or subjected to damage or stress.
- Do not forcefully pull the charging cable or damage it with sharp objects.
- Never touch the power cable/plug or vehicle cable with wet hands as this could cause a short circuit or electric shock.
- To avoid a risk of fire or electric shock, do not use this device with an extension cable. If the mains cable or vehicle cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

TECHNICAL SPECIFICATIONS


Model	EVC01-AC22 Series	EVC01-AC11 Series	EVC01-AC7 Series
AC Maximum Charge Output	22kW	11kW	7.4kW
Required Circuit Breaker on AC Mains	4P-40A MCB Type-C	4P-20A MCB Type-C	2P-40A MCB Type-C
Required Leakage Current Relay on AC Mains	4P-40A - 30mA RCCB Type-A	4P -20A - 30mA RCCB Type-A	2P -40A - 30mA RCCB Type-A
Required AC Mains Cable	5x 6 mm ² (< 50 m) External Dimensions: Ø 15-21 mm	5x4 mm ² (< 50 m) External Dimensions: Ø 15-21 mm	3x 6 mm ² (< 50 m) External Dimensions: Ø 11-15 mm

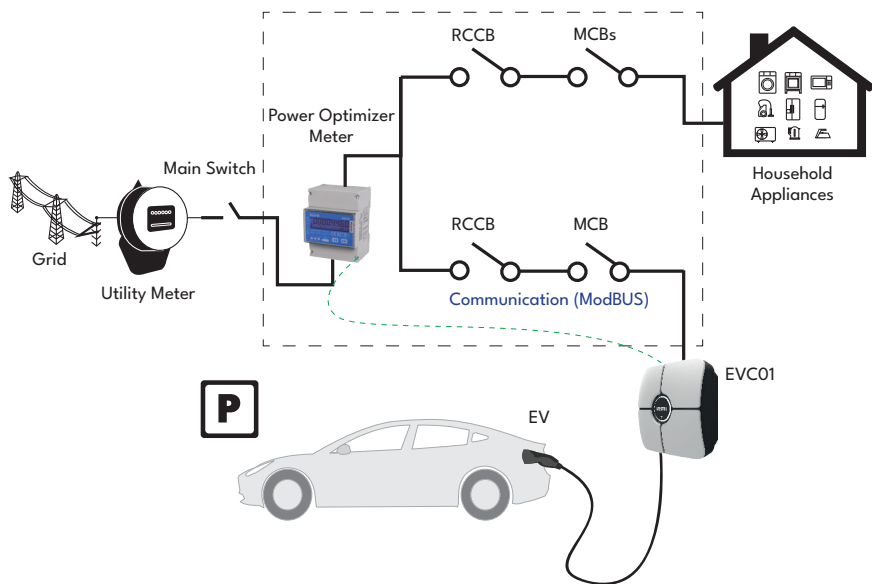

REQUIRED EQUIPMENT, TOOLS and ACCESSORIES


		
Drill Bit 8mm	Impact Drill	PC
		
Volt Indicator	Torx T20 Security Screwdriver	Water Level
		
Flathead Screwdriver (Tip width 2.00-2.5 mm)	Pointed Spudger	Right Angle Screwdriver Adapter / Torx T20 Security Bit
		
RJ45 Crimping Tool	Cat5e or cat6 ethernet cable	

BOX CONTENT

					
Dowels (M8x50) Plastic Dowels	Screw (M6x50)	Hook Mounting Plate	Torx T20 Security L-Wrench	SIM Card (Optional)	QSG(QuickStart Guide)
					
Mounting Plate	Screw (M4x8)	Torx (M4x9)	Metal Hook	Ferrite	Master&User RFID Card

OPENING THE COVER OF THE CHARGING STATION

	ATTENTION RISK OF ELECTRIC SHOCK	
Please power off the charging station mains supply 		

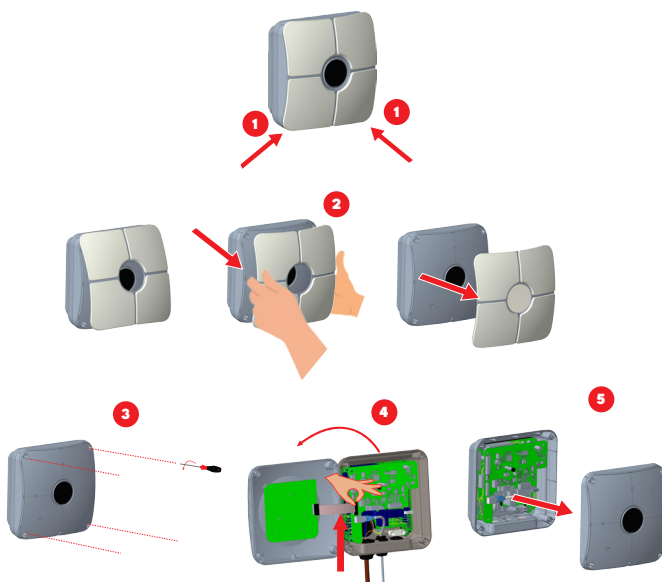

1- Remove tabs of the cosmetic cover from the front cover corners. First, hold the bottom left corner of the front cover and pull it towards you, bottom left tab will be removed. Then hold the bottom right corner of the front cover and pull it to yourself, bottom right tab will be removed.

2- Remove the cosmetic cover by holding the corners and pulling it towards you, as shown in the picture.

3- Then unscrew the screws of the front cover, which is connected to the main body.


4- Disconnect the flat cable in between the boards which are on the back side and front side of the unit.

5- Remove the front cover.


WALL MOUNT INSTALLATION

Wall mount installation is common for all charging station models. Metal pole installation is explained separately in metal pole installation guide.

1- Open the product front cover by following the instruction.

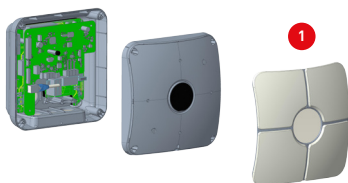


2- Place the mounting plate of the charging station to the wall which is given in accessory bag and mark the drill bit holes with a pencil.

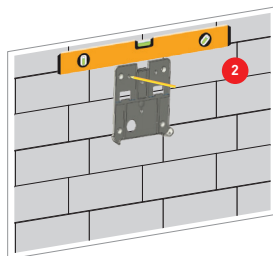


3- Drill the wall on the marked points using the impact drill (8mm drill bit).


4- Place the dowels into the holes.

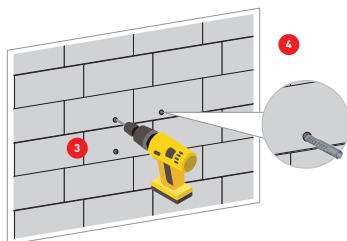

5- Screw the mounting plate to the wall with (M6x50) screws, which are inside the accessory bag, as shown in figure below.

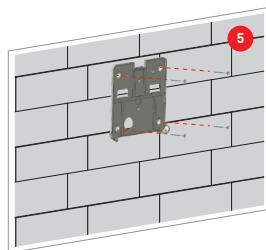

6- Hang back side of the unit to the mounting plate as shown in figure below.

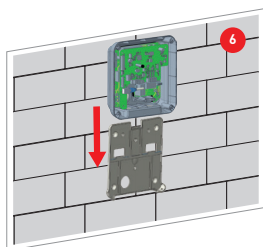


7- Tighten the torx (M4x9) security screws of the product, which are inside the accessory bag, as shown in figure below.




8- Insert the AC mains cable into the charging station from the left cable gland. Follow the AC Mains Connection instructions on the next pages, depending on the model of the charger. (Single/Three Phase)




9- Tighten the cable glands as shown in the figure. Before closing the cover of the charging station, follow the instructions in next sections if any function related to these sections are used.

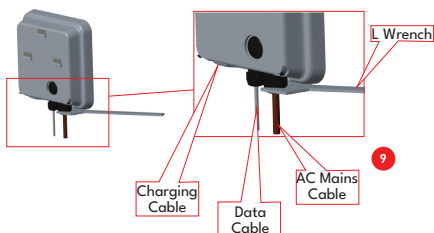


10- To close the front cover of the charging station, tighten the screws which were removed.
(Min:0,9 Nm ; Max:1,1 Nm torque value). Before closing the front cover, don't forget to connect the flat cable to the board which was removed.

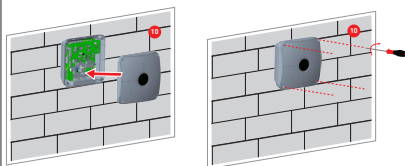

11- To attach the cosmetic cover to the charging station, mount the cosmetic cover to front cover with its tabs. Tighten the screw (M4x8) of the front cover and cosmetic cover, which is inside the accessory bag, as shown in figure below.

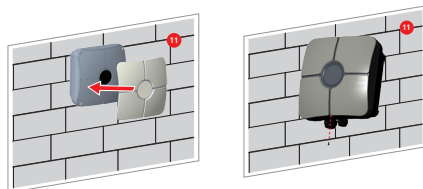


12- To be able to twist the charging cable, place the mounting bracket of the cable hook to the wall which is given in accessory bag and mark the drill bit holes with a pencil.

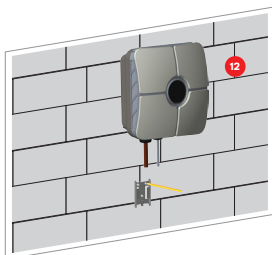



13- Drill the wall on the marked points using the impact drill (8mm drill bit).

14- Place the dowels into the holes.

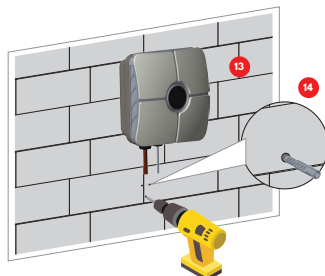



15- Tighten the security screws (M6x50) of the product using proper screwdriver.

16- Position the metal cable hook, which is inside the accessory bag, over the mounting bracket as shown in figure.

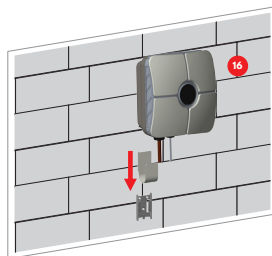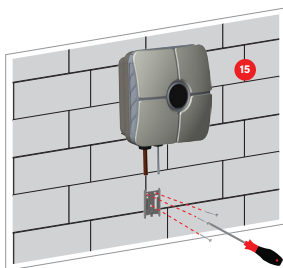


17- Twist the charging cable over the cable hook.

18- The unit is ready to use.

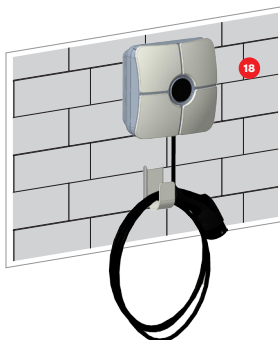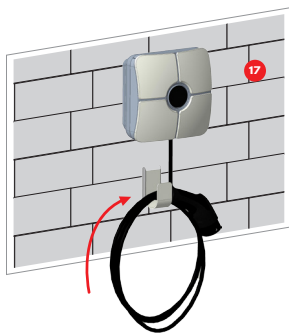


SINGLE PHASE CHARGING STATION AC MAINS CONNECTION

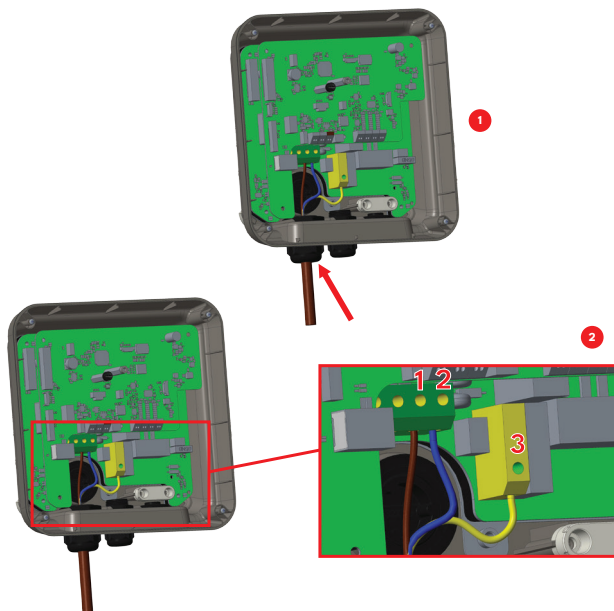

Insert the cable to the terminal block as shown in the image. Check the table below to match Electric Terminal number with AC Cable Color.

Electric Terminal	AC Cable Color
1	AC L1 (Brown)
2	AC Neutral (Blue)
3	Earth (Green-Yellow)


SINGLE PHASE CHARGING STATION AC MAINS CONNECTION (with PEN optional)

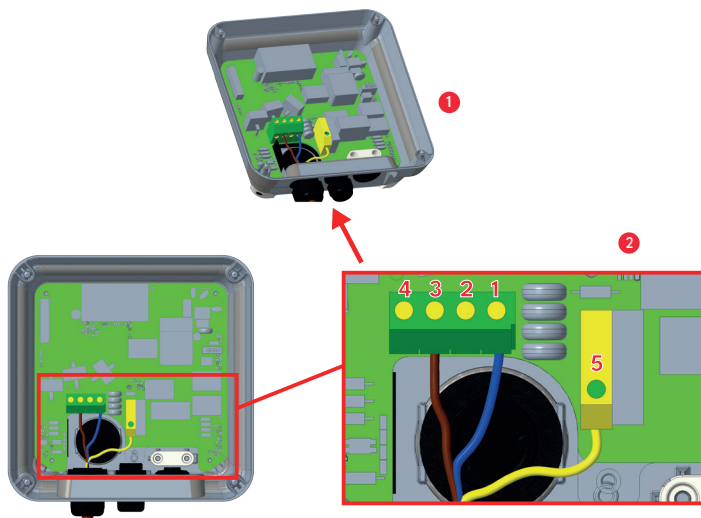

Insert the cable to the terminal block as shown in the image. Check the table below to match Electric Terminal number with AC Cable Color.

Electric Terminal	AC Cable Color
1	AC Neutral (Blue)
3	AC L1 (Brown)
5	Earth (Green-Yellow)

THREE PHASE CHARGING STATION AC MAINS CONNECTION

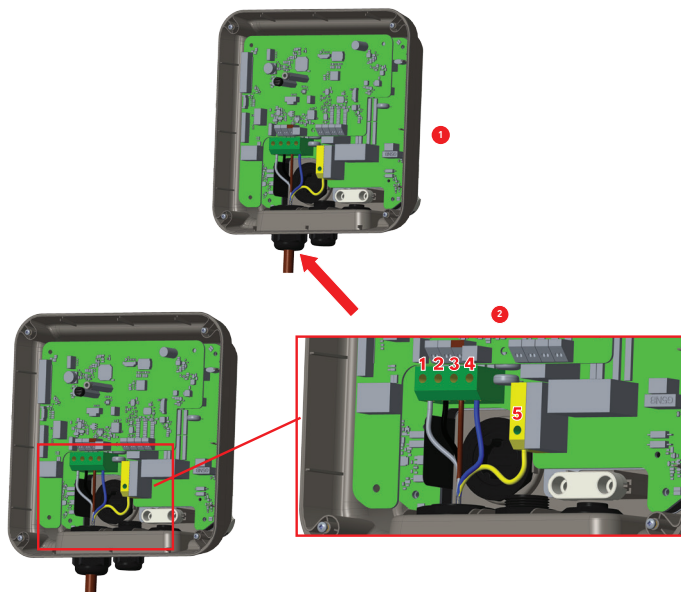

Insert the cable to the terminal block as shown in the image. Check the table below to match Electric Terminal number with AC Cable Color.

Electric Terminal	AC Cable Color
1	AC L3 (Grey)
2	AC L2 (Black)
3	AC L1 (Brown)
4	AC Neutral (Blue)
5	Earth (Green-Yellow)

WALL MOUNTING WARNINGS

- Read the instructions before mounting your charging station on the wall.
- Do not install the charging station on a ceiling or inclined wall.
- Use the specified wall mounting screws and other accessories.
- This unit is rated for indoor or outdoor installation. If this unit is mounted outdoors, the hardware for connecting the conduits to the unit must be rated for outdoor installation and be installed properly to maintain the proper IP rating on the unit.

COMMISSIONING


Your product has Wi-Fi Hotspot feature.

Wi-Fi Hotspot

Wi-Fi Hotspot SSID and password are printed to the label inside the front cover of the Quick Start Guide as shown below.

WEB Configuration UI

Open your WEB browser and type the IP address which is printed to the label inside the front cover of the Quick Start Guide. You can log into the WEB configuration interface via Wi-Fi Hotspot by entering the network information written on the label.

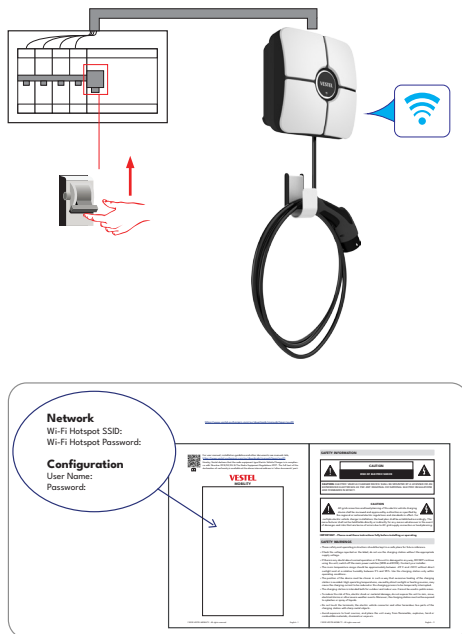

VESTEL MOBİLİTE SANAYİ VE TİCARET A.Ş. EGE SERBEST BÖLGE ŞUBESİ
Zafer SB Mah. Ayfer sok. No:22 İç Kapı No:1 Gaziemir,İzmir/Türkiye



50734614